



REMOVAL AND INSTALLATION

Wheel and Tire


Removal

CAUTIONS:

-  Do not use heat to loosen a seized wheel nut.
-  Do not use power tools on locking wheel nuts.


1. Loosen

1.

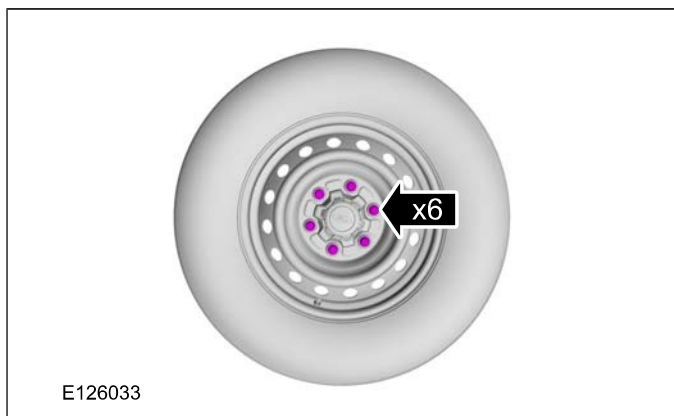


2. For additional information, refer to: **Jacking** (100-02 Jacking and Lifting, Description and Operation) / **Lifting** (100-02 Jacking and Lifting, Description and Operation).

3.

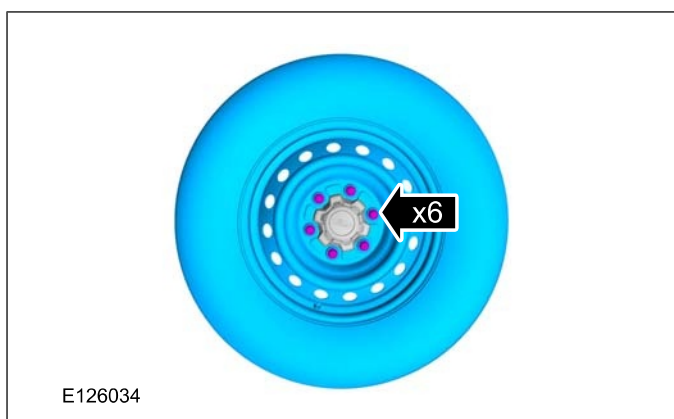


NOTE: Only tighten the nuts finger tight at this stage.

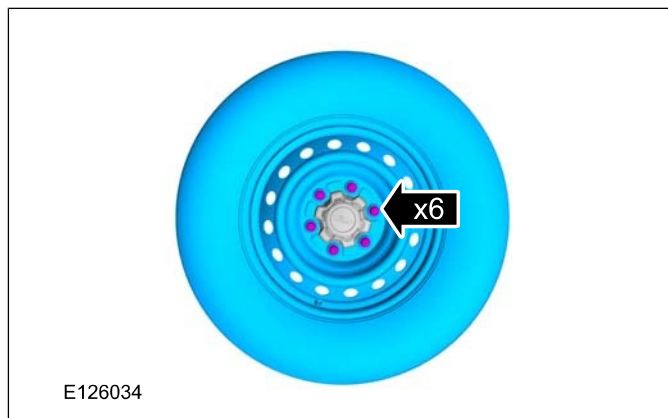

2. Lower the vehicle.

3. When installing the wheels and tires, tighten the wheel nuts in a criss-cross pattern to the following tightening torque. !!

- Tightening torque 88.2—117.6 Nm {9.00—11.99 Kgf·m, 65.06—86.73 ft·lbf}.

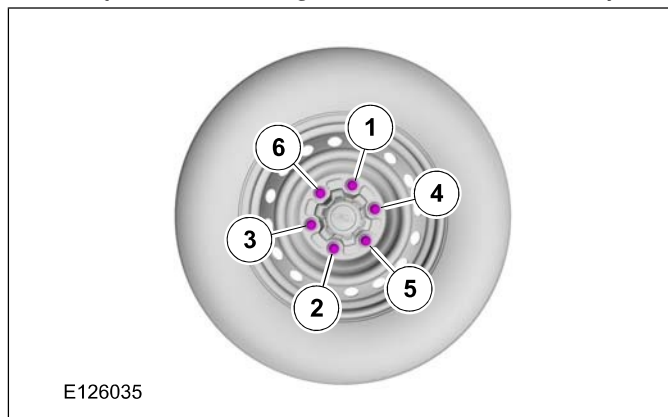

Installation

1.  **WARNING:** Make sure that the mating faces are clean and free of corrosion and foreign material